


# Installation Manual



## DISTINCT 3D Wall Panels

### 1, TOOLS REQUIRED

Level	Working Gloves
Ruler	Eye Protection
Pencil	Table Saw
Glue/Adhesive	Utility Knife

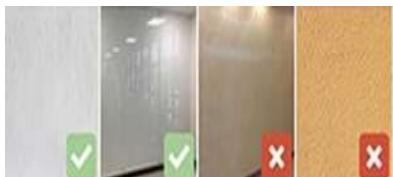

### 2, PREPARATION FOR THE WALL

All the walls must be flat, dry, clean, and firm. The surface must be painted with water based seal primer if the wall is aged



### 3, PREPARATION FOR THE WALL PANELS

Open the box and take out the panels very carefully. Each 5 pcs in one stack. Put the panels on the clear and dry floor for 24 hours to balance the moisture between the panels and the environment, to prevent excessive expansion or contraction after installation



### 4, MEASURE THE WALL

Measure the size of the wall to find out the central point of it, then mark vertically and horizontally. If the wall has corners, the planning should start from the corners to reduce the number of cut panels. Arrange it on the floor by rotating the panels before attempting to install, ensuring correct installation of the desired pattern.



### 5, INSTALL PANELS ON THE WALL

We recommend installing the panel with Gorilla heavy duty construction adhesive, bonding all planes along the back, not just the outer edge, using thin lines - don't let it penetrate beyond the edge, wait for the glue to dry, and then go to the next step. It can also be pasted with 3M double-sided tape, but it is only suitable for flat, smooth and dust free surfaces.



## 6, CUTTING THE PANELS

If we come across a corner or electrical outlet, we can draw a line on the panel first and cut the panel with a table saw along the line, or use a straight edge and a utility knife to cut from the back side, which requires a bit of patience, first gently scribing the line and then cutting a little deeper each time.



## 7, EDGE CAULKING AND PAINTED PANELS

The fine gap between the panels can be filled with silicone sealant and polished after drying. If the cut edge of the panel is connected with the wall corner, fill the cut edge with gypsum board compound / acrylic sealant. If it is necessary to paint the panel, spray the panel with oil-based paint, and paste the panel after the paint is dried.